


## INSTRUCTIONS FOR CHANGING YOUR PRO EARS INTERCHANGEABLE LENSES

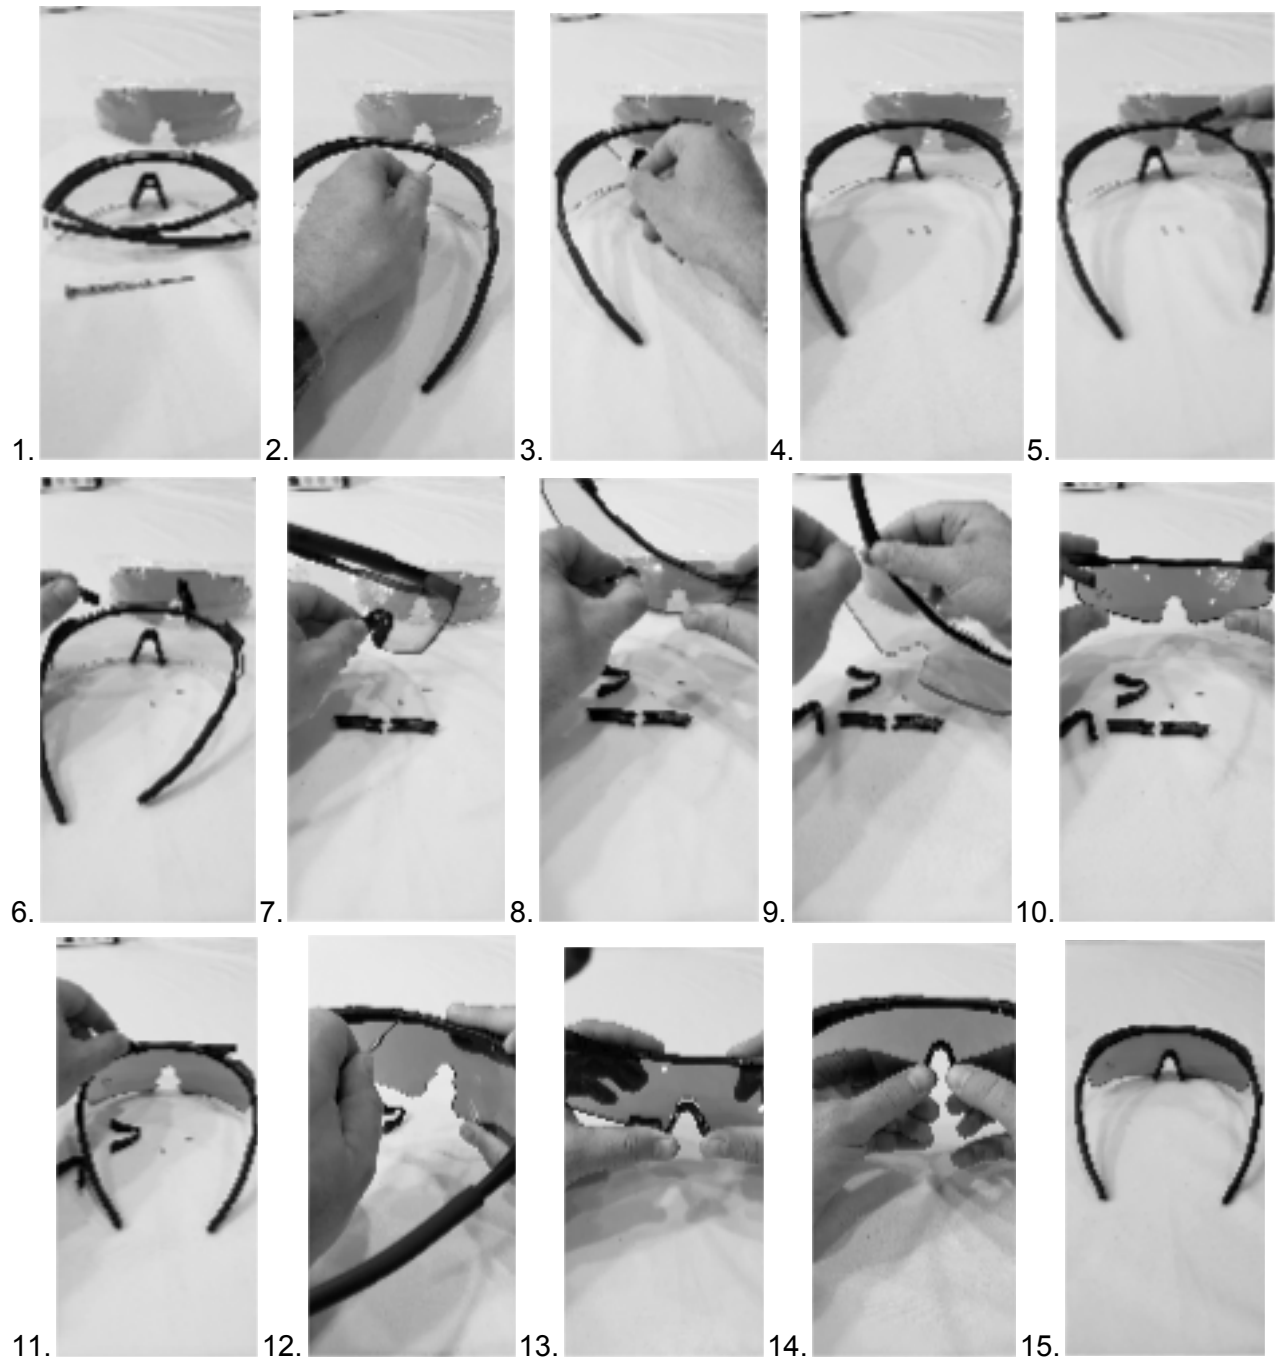

1. Using a small Phillips head screwdriver, identify the two screws from the inside of the glass frame
2. Unscrew the left and right screws.
3. Remove the screw from the frame
4. Set the screws in a safe place to ensure not to lose.
5. Lift right toggle and remove.
6. Lift left toggle and remove.
7. Remove rubber nose piece.
8. Pinch hard on the plastic nose piece from the inside of the lens and pull down to remove.
9. Separate original lens from the frame.
10. Attach the frame to the new lens, Line up the frame and lens so the screw holes align with the holes in the frame.
11. Attach both toggles to the frame. Be sure the hinge lines up with the hole in the frame.
12. Replace the screws.
13. Push the plastic nose piece back into place.
14. Attach the rubber nose piece to the plastic nose piece.
15. Your glasses are ready!

Questions? Call us at 1-800-841-3660 - Email us at [customerservice@altusbrands.com](mailto:customerservice@altusbrands.com) - Visit us at [www.proears.com](http://www.proears.com)